


TVE 40 T

EN

INSTRUCTIONS
TOWER FAN

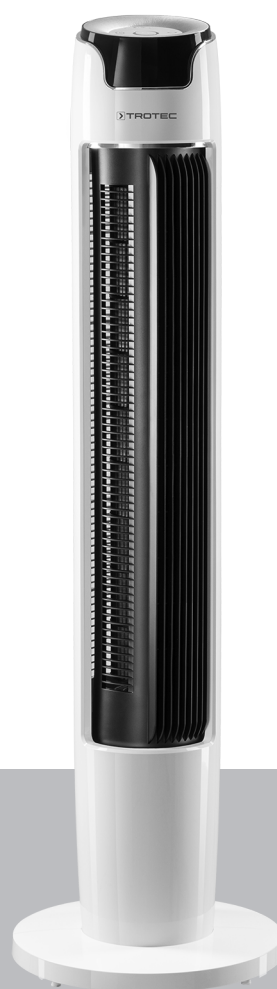

 **TROTEC**

Table of contents

Information on the use of these instructions	2
Safety	2
Information about the device	4
Transport and storage	5
Assembly and start-up	5
Operation	7
Errors and faults	9
Maintenance	10
Technical annex.....	11
Disposal	11

Information on the use of these instructions

Symbols



Warning of electrical voltage

This symbol indicates dangers to the life and health of persons due to electrical voltage.



Warning

This signal word indicates a hazard with an average risk level which, if not avoided, can result in serious injury or death.



Caution

This signal word indicates a hazard with a low risk level which, if not avoided, can result in minor or moderate injury.

Notice

This signal word indicates important information (e.g. material damage), but does not indicate hazards.



Info


Information marked with this symbol helps you to carry out your tasks quickly and safely.



Follow the manual

Information marked with this symbol indicates that the instructions must be observed.

You can download the current version of the instructions and the EU declaration of conformity via the following link:

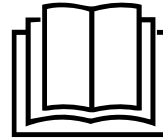

TVE 40 T



<https://hub.trotec.com/?id=41976>

Safety

Read this manual carefully before starting or using the device. Always store the manual in the immediate vicinity of the device or its site of use.



Warning

Read all safety warnings and all instructions.

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.

- Do not use the device in potentially explosive rooms or areas and do not install it there.
- Do not use the device in an aggressive atmosphere.
- Place the device in an upright and stable position on horizontal and stable ground.
- Let the device dry out after a wet clean. Do not operate it when wet.
- Do not use the device with wet or damp hands.
- Do not expose the device to directly squirting water.
- Never insert any objects or limbs into the device.
- Do not cover the device during operation.
- Do not sit on the device.
- This appliance is not a toy. Keep away from children and animals.

- Check accessories and connection parts for possible damage prior to every use of the device. Do not use any defective devices or device parts.
- Ensure that all electric cables outside of the device are protected from damage (e.g. caused by animals). Never use the device if electric cables or the power connection are damaged!
- The mains connection must correspond to the specifications in the Technical annex.
- Insert the mains plug into a properly fused mains socket.
- Observe the technical data when selecting extensions to the power cable. Completely unroll the extension cable. Avoid electrical overload.
- Before carrying out maintenance, care or repair work on the device, remove the mains plug from the mains socket. Hold onto the mains plug while doing so.
- Switch the device off and disconnect the power cable from the mains socket when the device is not in use.
- Do not under any circumstances use the device if you detect damages on the mains plug or power cable. If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
Defective power cables pose a serious health risk!
- When positioning the device, observe the minimum distances from walls and other objects as well as the storage and operating conditions specified in the Technical annex.
- Make sure that the air inlet and outlet are not obstructed.
- Make sure that there are no loose items or dirt located in the immediate surroundings of air inlet and air outlet.
- When unassembled, do not operate the device and do not connect it to the mains.
- Improper installation can lead to a fire, electric shock or severe personal injury.
- The device is provided with an overheating protection which is activated by overheating of the device (when exceeding the operating temperature). In such an event the device switches off automatically.
- Use batteries of type AAA.
- Do not insert rechargeable batteries into the remote control.
- Never charge batteries that cannot be recharged.
- Different types of batteries and new and used batteries must not be used together.
- Insert the batteries into the battery compartment according to the correct polarity.
- Remove discharged batteries. Batteries contain materials hazardous to the environment. Dispose of the batteries according to the national regulations.
- Remove the batteries from the remote control if you will not be using the device for a longer period of time.
- Never short-circuit the supply terminal in the battery compartment!
- Do not swallow batteries! If a battery is swallowed, it can cause severe internal burns within 2 hours! These burns can lead to death!
- If you think batteries might have been swallowed or otherwise entered the body, seek medical attention immediately!
- Keep new and used batteries and an open battery compartment away from children.
- If the battery compartment does not close securely, stop using the product via the remote control.

Intended use

Only use the device as tower fan for the ventilation of interior spaces whilst adhering to the technical data.

Any use other than the intended use is regarded as misuse.

Reasonably foreseeable misuse


- Do not place the device on wet or flooded ground.
- Do not place any objects, e.g. clothing, on the device.
- Do not use the device out of doors.
- Do not make any unauthorised modifications, alterations or structural changes to the device.


Personnel qualification


People who use this device must:


- be aware of the dangers that occur when working with electric devices in damp areas.
- have read and understood the instructions, especially the Safety chapter.


Residual risks

- 

Warning of electrical voltage
Work on the electrical components must only be carried out by an authorised specialist company!
- 

Warning of electrical voltage
Before any work on the device, remove the mains plug from the mains socket!
Do not touch the mains plug with wet or damp hands.
Hold onto the mains plug while pulling the power cable out of the mains socket.
- 

Warning
Dangers can occur at the device when it is used by untrained people in an unprofessional or improper way!
Observe the personnel qualifications!
- 

Warning
The device is not a toy and does not belong in the hands of children.
- 

Warning
Risk of suffocation!
Do not leave the packaging lying around. Children may use it as a dangerous toy.
- Notice**
Do not use abrasive cleaners or solvents to clean the device.

Behaviour in the event of an emergency

1. Switch the device off.
2. Disconnect the device from the mains by removing the mains plug from the socket. When doing so, be sure to hold the plug, not the cable.
3. Do not reconnect a defective device to the mains.

Information about the device



Device description

The device is suitable for indoor air circulation.

The device comes with the following features:

- 6 speed levels
- Adjustable timer function up to 12 hours
- On-demand 60° oscillation

Device depiction

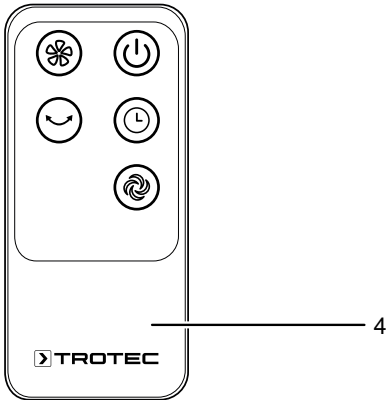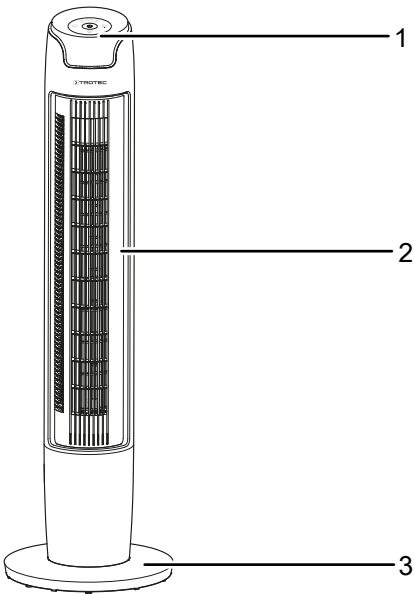

No.	Designation
1	Control panel
2	Fan body
3	Foot
4	Remote control

Transport and storage

Notice

If you store or transport the device improperly, the device may be damaged.

Note the information regarding transport and storage of the device.

Transport

Before transporting the device, observe the following:

- Switch the device off.
- Disconnect the device from the mains by removing the mains plug from the socket. When doing so, be sure to hold the plug, not the cable.
- Do not use the power cable to drag the device.

After transporting the device, proceed as follows:

- Set up the device in an upright position after transport.

Storage

Before storing the device, proceed as follows:

- Switch off the device.
- Disconnect the device from the mains by removing the mains plug from the socket. When doing so, be sure to hold the plug, not the cable.

When the device is not being used, observe the following storage conditions:

- Store the device in a dry location and protected from frost and heat.
- If required, use a cover to protect the device from invasive dust.
- Place no further devices or objects on top of the device to prevent it from being damaged.
- Remove the batteries from the remote control.

Assembly and start-up

Scope of delivery

- 1 x Device
- 1 x Remote control (without batteries)
- 1 x Manual


Unpacking the device

1. Open the cardboard box and take the device out.
2. Completely remove the packaging.
3. Fully unwind the power cable. Make sure that the power cable is not damaged and that you do not damage it during unwinding.


Assembly

Mounting the foot

1. Connect the two parts of the foot (3) so that the pins engage in the provided openings.

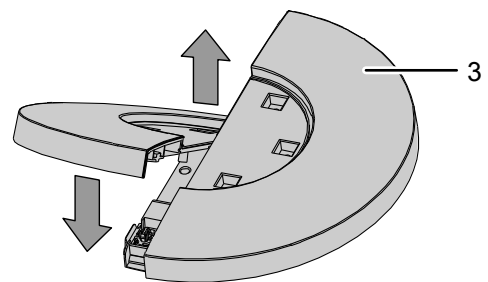


2. Turn the two catches (5) at the bottom side of the foot by about 90° to lock the two foot parts together.

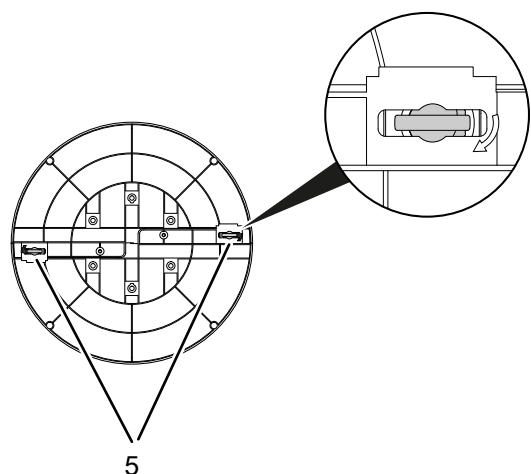


Connecting the fan body and foot

1. Connect the assembled foot (3) with the fan body (2).
2. Screw the three connection screws (6) into the provided holes (7) at the bottom side of the fan body.

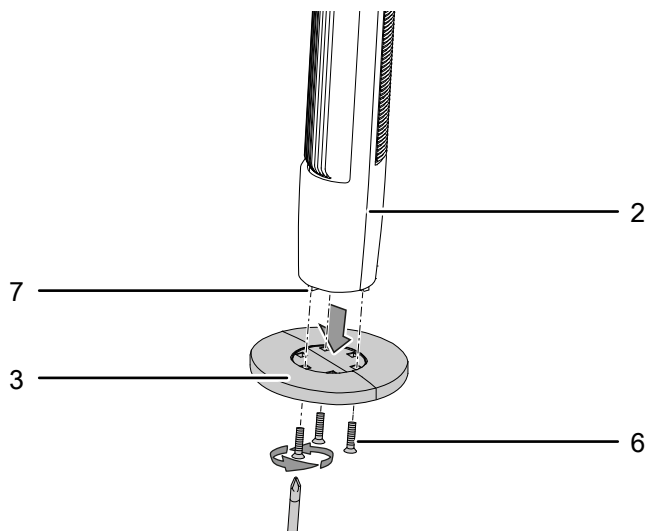

Start-up

When positioning the device, observe the minimum distance from walls or other objects as described in the chapter Technical annex.

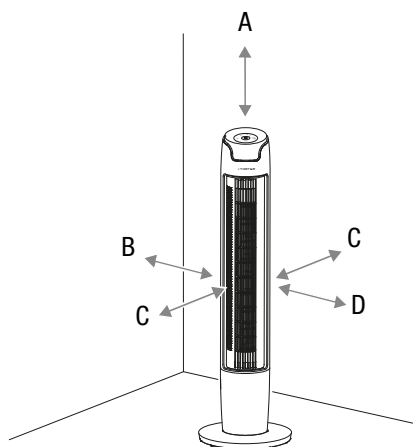

Inserting batteries into the remote control




Warning of electrical voltage

Do not touch the battery compartment with wet or damp hands.

Notice

Do not use rechargeable batteries! Observe the Technical data for start-up.

1. Press the battery cover at the rear of the battery compartment (8) and pull the battery cover out of the remote control.
2. Insert two AAA batteries (1.5 V) into the battery compartment adhering to the correct polarity.
3. Slide the battery cover back into the remote control.

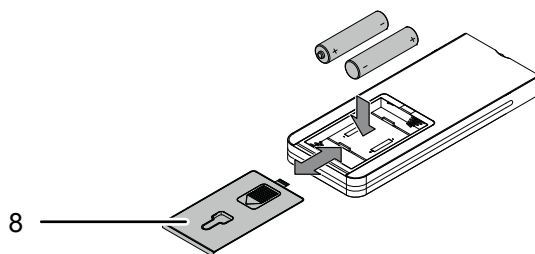


Connecting the power cable

- Connect the mains plug to a properly secured socket.

- Before restarting the device, check the condition of the power cable. If there are doubts as to the sound condition, contact the customer service.
- Place the device in an upright and stable position on horizontal and stable ground.
- Do not create tripping hazards when laying the power cable or other electric cables, especially when positioning the device in the middle of the room. Use cable bridges.
- Make sure that extension cables are completely unrolled.
- Make sure that no curtains or other objects interfere with the air flow.


Operation

Operating elements

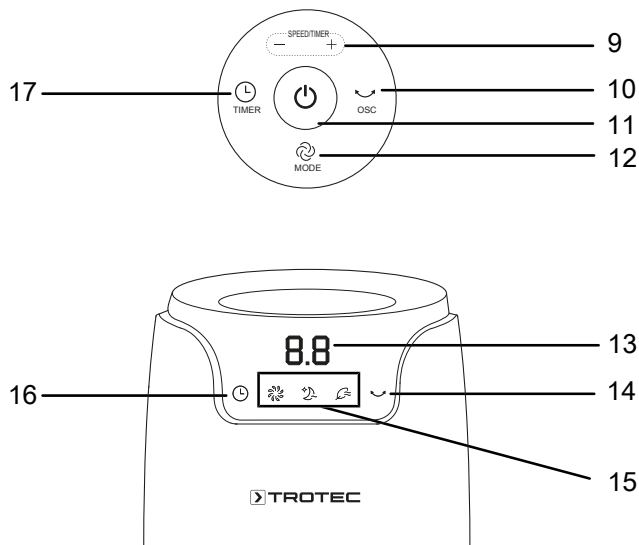

Remote control

All settings of the device can also be made using the remote control included in the scope of delivery.

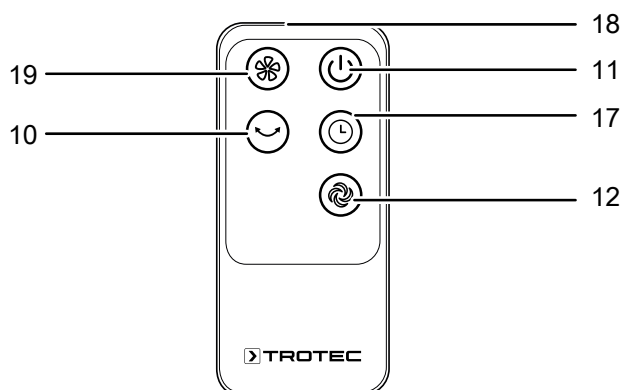

12	MODE button	For selecting the operating mode: <i>Normal operation</i> <i>Night mode</i> <i>Natural wind</i>
13	Segment display	<ul style="list-style-type: none"> Indication of the number of hours of the activated timer (0.5 h to 12 h) Indication of the fan stage
14	Oscillation indication	Indicates whether the oscillation function is activated
15	Operating mode LEDs	Indicates the selected operating mode: <ul style="list-style-type: none"> ☼ = <i>normal operation</i> 🌙 = <i>night mode</i> 🌬 = <i>natural wind</i>
16	Timer LED	Timer = automatic switch-on and switch-off
17	TIMER button	Timer function for switch-on and switch-off
18	Remote control transmitter/receiver	For infrared transmission to the device
19	SPEED button	<ul style="list-style-type: none"> Setting the fan stage (1–6) “+” = increasing the fan stage “-” = reducing the fan stage stage 1 = low fan speed stage 3 = medium fan speed stage 6 = high fan speed

Switching the device on

Once you have completely installed the device as described in the chapter Assembly and start-up, you can switch it on.

1. Press the **ON/OFF** button (11).

⇒ An acoustic signal is emitted and the device starts up in *normal operation* mode at fan stage 1.

Setting the operating mode

The device has the following operating modes:


- *Normal operation*
- *Night mode*
- *Natural wind*

No.	Designation	Meaning
9	SPEED/TIMER button	<ul style="list-style-type: none"> Setting the fan stage (1–6) “+” = increasing the fan stage “-” = reducing the fan stage stage 1 = low fan speed stage 3 = medium fan speed stage 6 = high fan speed Setting the number of hours of the activated timer
10	OSC button	Activating and deactivating the oscillation function
11	ON/OFF button	Switching the device on and off

Normal operation

In *Normal operation* mode the fan keeps running at the desired fan stage. The fan stage can be set from 1 to 6 in this operating mode and is shown on the segment display (13).

Please proceed as follows to set the fan stage in *Normal operation* mode:


1. Press the **MODE** button (12) until the  = *Normal operation* LED lights up among the operating mode LEDs (15).
⇒ The device runs in *Normal operation* mode.
2. Press the **SPEED/TIMER** button (9). By pressing "+" repeatedly, you can increase the fan stage. The selected fan stage is shown on the segment display (13).
⇒ The device keeps running at the set fan stage.
3. Press the **SPEED/TIMER** button (9): By pressing "-" repeatedly, you can reduce the fan stage. The selected fan stage is shown on the segment display (13).
⇒ The device keeps running at the set fan stage.

Night mode

In *Night mode*, the device gradually changes the fan stage automatically depending on the selected fan stage. You can set the fan stage manually from 1 to 3 in this mode.

- At fan stage 1, the device automatically switches to fan stage 2 after 15 minutes in *Night mode*. After an operating time of 45 minutes, the device automatically switches back to fan stage 1 and keeps running at this speed.
- At fan stage 2, the device automatically switches to fan stage 1 after an operating time of 60 minutes in *Night mode* and keeps running at this speed.
- At fan stage 3, the device automatically switches to fan stage 2 after an operating time of 30 minutes in *Night mode*. After an operating time of 60 minutes, the device automatically switches to fan stage 1 and keeps running at this speed.


To activate night mode, please proceed as follows:

1. Press the **MODE** button (12) until the  = *Night mode* LED lights up among the operating mode LEDs (15).
⇒ The device runs in *Night mode*.

Natural wind

In *Natural wind* mode, the fan speed automatically increases and decreases alternately to generate a pleasant, natural air stream. You can set the fan stage manually from 1 to 3 in this mode.

Please proceed as follows to activate *Natural wind* mode:

1. Press the **MODE** button (12) until the  = *natural wind* LED lights up among the operating mode LEDs (15).
⇒ The device switches to *Natural wind* mode.

Please proceed as follows to set the fan stage in *natural wind* mode:

1. Press the **SPEED/TIMER** button (9): By pressing "+" repeatedly, you can increase the fan stage. The selected fan stage is shown on the segment display (13).
⇒ The device switches over to the selected fan stage.
⇒ The device continues to run in *Natural wind* mode.
2. Press the **SPEED/TIMER** button (9): By pressing "-" repeatedly, you can reduce the fan stage. The selected fan stage is shown on the segment display (13).
⇒ The device switches over to the selected fan stage.
⇒ The device continues to run in *Natural wind* mode.

Setting the timer

The timer function switches the device off after the set time has elapsed.

The number of hours of the timer can range from 0.5 to 12. The timer can be set in increments of 0.5 hours (0.5 h to 10 h) or in increments of 1 hour (10 h to 12 h).

The function can be set in all operating modes.

- ✓ **Automatic switch-on:** The device is switched off.
 - ✓ **Automatic switch-off:** The device is switched on.
1. Press the **TIMER** button (17) to activate the timer.
⇒ The Timer LED (16) flashes for approx. 5 s.
 2. Press the **SPEED/TIMER** button (9) to select the desired number of hours until automatic switch-off.
⇒ The segment display (13) indicates the number of hours until automatic switch-off.
 3. Wait for 5 seconds to confirm the setting.
⇒ The timer LED (16) is illuminated. The segment display (13) indicates the current fan stage and operating mode again.
⇒ After the predefined time, the device switches itself on/off.
 4. To delete the setting, press the **SPEED/TIMER** button (9) and select 00 hours.
⇒ The timer LED (16) goes out.

Memory function

If you switch the device back on from standby mode or after a power failure, the settings selected for the last used operating mode are saved.

Any activated timer will not be saved in the device.

Using the oscillation function

By means of the oscillation function you can achieve consistent ventilation.

- ✓ The device is switched on and operating.
- 1. Press the *OSC* button (10) to activate the oscillation function.
 - ⇒ The oscillation function is activated.
 - ⇒ The fan body rotates to and fro by up to 60°.
- 2. Press the *OSC* button (10) to deactivate the oscillation function.
 - ⇒ The oscillation function is deactivated.
 - ⇒ The device stops oscillation at the desired position and continues to run in the selected operating mode.

Shutdown



Warning of electrical voltage

Do not touch the mains plug with wet or damp hands.

- Switch off the device by pressing the *ON/OFF* button (11).
- Disconnect the device from the mains by removing the mains plug from the socket. When doing so, be sure to hold the plug, not the cable.
- If required, clean the device according to the "Maintenance" chapter.
- Store the device according to the Transport and storage chapter.

Errors and faults

The device has been checked for proper functioning several times during production. If malfunctions occur nonetheless, check the device according to the following list.

The device does not start:

- Check the power connection.
- Check the power cable and mains plug for damage.
- Check the on-site fusing.
- Check whether the overheating protection has tripped, see chapter Safety.

The fan does not start:

- Check whether the unit is switched on.
- Check the power supply and whether the plug or cable is defective.

The device is loud or vibrates:

- Check whether the device is set up in a stable and upright position.
- Check whether the device is mounted correctly.

The device still does not operate correctly after these checks:

Please contact the customer service. If necessary, bring the device to an authorised specialist electrical company or to the manufacturer for repair.

Maintenance

Activities required before starting maintenance




Warning of electrical voltage

Do not touch the mains plug with wet or damp hands.


- Switch off the device by pressing the *ON/OFF* button (11).
- Disconnect the device from the mains by removing the mains plug from the socket. When doing so, be sure to hold the plug, not the cable.

Cleaning the housing

Clean the housing with a soft, damp and lint-free cloth. Make sure that no moisture enters the housing. Protect electrical components from moisture. Do not use any aggressive cleaning agents such as cleaning sprays, solvents, alcohol-based or abrasive cleaners to dampen the cloth.

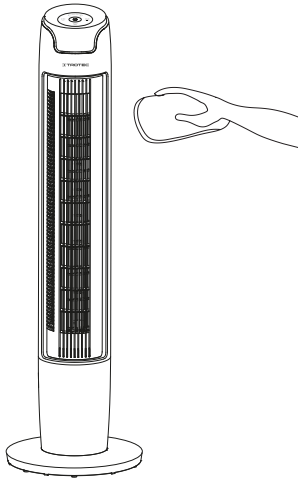


2. Clean the fan body's housing cover with a soft, damp and lint-free cloth. Ensure that no moisture enters the housing. Protect electrical components from moisture. Do not use any aggressive cleaning agents such as cleaning sprays, solvents, alcohol-based or abrasive cleaners to dampen the cloth.
3. Allow the housing cover to dry completely.
4. Reattach the cover at the rear of the fan body and tighten in the screw (20).

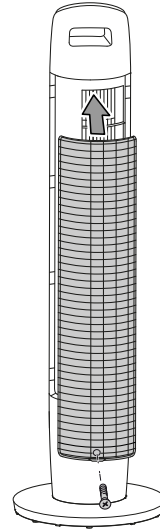

- Other than that, the device does not require maintenance.

Cleaning the inside of the housing cover

- ✓ The device is switched off.
 - ✓ The power cable has been removed from the mains socket.
1. Remove the housing cover at the rear of the fan body by loosening the screw (20).

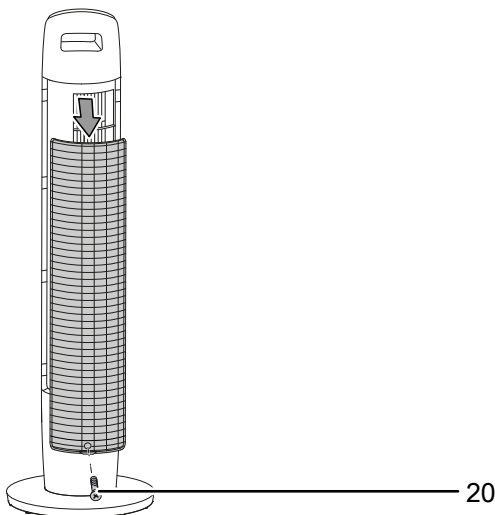

Technical annex

Technical data

Parameter	Value
Model	TVE 40 T
Fan stages	6
Air velocity	2 m/s
Input voltage	220 – 240 V / 50 Hz
Power consumption	45 W
Power cable length	1.80 m
Oscillation function	60°
Sound pressure level (1 m distance)	57 dB(A)
Weight	5.5 kg
Dimensions (length x width x height)	325 x 325 x 1111 mm
Minimum distance to walls and other objects	
top (A):	30 cm
rear (B):	30 cm
sides (C):	30 cm
front (D):	30 cm
Remote control batteries	2 x batteries of type AAA/1.5 V

Disposal

Always dispose of packing materials in an environmentally friendly manner and in accordance with the applicable local disposal regulations.



The icon with the crossed-out wheeled bin indicates that this device and any associated components (e.g. remote controls) must not be disposed of with household waste at the end of their life, in accordance with the Waste Electrical and Electronic Equipment Directive (2012/19/EU) and national laws.

You will find collection points for free return of waste electrical and electronic equipment in your vicinity. The addresses can be obtained from your municipality or local administration. You can also find out about other return options that apply for many EU countries on the website <https://hub.trotec.com/?id=45090>. Otherwise, please contact an official recycling centre for electronic and electrical equipment authorised for your country.

The separate collection of waste electrical and electronic equipment aims to enable the re-use, recycling and other forms of recovery of waste equipment as well as to prevent negative effects for the environment and human health caused by the disposal of hazardous substances potentially contained in the equipment.



This icon with the crossed-out wheeled bin indicates that batteries or accumulators must not be disposed of with household waste at the end of their life. If the device contains batteries or accumulators that contain mercury, cadmium or lead, the respective chemical symbol (Hg, Cd or Pb) is shown below the icon of the crossed-out wheeled bin. To prevent environmental pollution, do not carelessly leave batteries or electrical and electronic equipment containing batteries in public areas. In the European Union, batteries and accumulators must be returned to a designated collection point in accordance with REGULATION (EU) 2023/1542 OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 12 July 2023 concerning batteries and waste batteries. Remove batteries/accumulators and dispose of them separately according to the relevant legal requirements.

Only for United Kingdom

According to Waste Electrical and Electronic Equipment Regulations 2013 (SI 2013/3113) (as amended) and the Waste Batteries and Accumulators Regulations 2009 (SI 2009/890) (as amended), devices that are no longer usable must be collected separately and disposed of in an environmentally friendly manner.

Trotec GmbH

Grebbeener Str. 7
52525 Heinsberg
Germany

☎ +49 2452 962-0

☎ +49 2452 962-200

online@trotec.com

www.trotec.com