

**EN**

**INSTRUCTIONS**  
FAN HEATER

EN This product is only suitable for well insulated spaces or occasional use.

**Table of contents**

**Information on the use of these instructions** ..... 2

**Safety** ..... 2

**Information about the device**..... 5

**Transport and storage**..... 5

**Assembly and start-up**..... 5

**Operation** ..... 8

**Errors and faults**..... 11


**Maintenance** ..... 11


**Technical annex**..... 12

**Disposal** ..... 14


**Information on the use of these instructions**

**Symbols**


 **Warning of electrical voltage**  
This symbol indicates dangers to the life and health of persons due to electrical voltage.


 **Warning of hot surface**  
This symbol indicates dangers to the life and health of persons due to hot surface.

 **Warning**  
This symbol indicates a fire hazard.


 **Warning**  
This signal word indicates a hazard with an average risk level which, if not avoided, can result in serious injury or death.

**Notice**  
This signal word indicates important information (e.g. material damage), but does not indicate hazards.

 **Info**  
Information marked with this symbol helps you to carry out your tasks quickly and safely.

 **Follow the manual**  
Information marked with this symbol indicates that the instructions must be observed.

You can download the current version of these instructions via the following link:

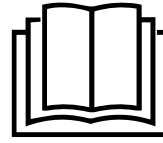


TFC-W 27 E





<https://hub.trotec.com/?id=47615>

**Safety**

**Read this manual carefully before starting or using the device. Always store the manual in the immediate vicinity of the device or its site of use.**

 **Warning**  
**Read all safety warnings and all instructions.**  
Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.  
**Save all warnings and instructions for future reference.**  
This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.  
Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.

 **Warning**  
Children of less than 3 years should be kept away from the device unless continuously supervised.  
Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.  
Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

 **Warning**  
Do not use the device in small rooms if persons are present who cannot leave the room independently and who are not under constant supervision.

- Do not use the device in potentially explosive rooms or areas and do not install it there.
- Do not use the device in an aggressive atmosphere.

- Place the device in an upright and stable position on a horizontal and stable surface.
- Let the device dry out after a wet clean. Do not operate it when wet.
- Do not use the device with wet or damp hands.
- Do not expose the device to directly squirting water.
- Never insert any objects or limbs into the device.
- Do not cover the device during operation.
- Do not remove any safety signs, stickers or labels from the device. Keep all safety signs, stickers and labels in legible condition.
- Do not sit on the device.
- This appliance is not a toy. Keep away from children and animals.
- Check accessories and connection parts for possible damage prior to every use of the device. Do not use any defective devices or device parts.
- Ensure that all electric cables outside of the device are protected from damage (e.g. caused by animals). Never use the device if electric cables or the power connection are damaged!
- The mains connection must correspond to the specifications in the Technical annex.
- Insert the mains plug into a properly fused mains socket.
- Observe the device's power input, cable length and intended use when selecting extensions to the power cable. Completely unroll extension cables. Avoid electrical overload.
- Before carrying out maintenance, care or repair work on the device, remove the mains plug from the mains socket. Hold onto the mains plug while doing so.
- Switch the device off and disconnect the power cable from the mains socket when the device is not in use.
- Do not under any circumstances use the device if you detect damages on the mains plug or power cable. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.  
Defective power cables pose a serious health risk!
- When positioning the device, observe the minimum distances from walls and other objects as well as the storage and operating conditions specified in the Technical annex.
- Make sure that the air inlet and outlet are not obstructed.
- Do not place the device on combustible ground.
- Only use original spare parts, for otherwise safe and functional operation cannot be ensured.
- Allow the device to cool down before transport and/or maintenance work.
- The device must not be installed directly beneath a wall socket.
- Do not use the device if it has been dropped or if it shows visible signs of damage.
- Use the CR 2025 or CR 2032 button battery type.
- Do not insert a rechargeable battery into the remote control.
- Never charge a battery that cannot be recharged.
- Remove the discharged battery. Batteries contain materials hazardous to the environment. Dispose of the battery according to the national regulations.
- Remove the battery from the remote control if you will not be using the device for a longer period of time.
- Never short-circuit the terminal of the battery!
- Do not swallow batteries! If a battery is swallowed, it can cause severe internal burns within 2 hours! These burns can lead to death!
- If you think batteries might have been swallowed or otherwise entered the body, seek medical attention immediately!
- Keep new and used batteries and an open battery compartment away from children.
- If the battery compartment does not close securely, stop using the product via the remote control.

### Intended use

The device is only suitable for well insulated spaces or occasional use.

The device is used for heating and ventilating closed rooms and is designed for private use. It is mounted on the wall and has to be connected to a wall socket. The device is particularly well suited for additional heating.

Any use other than the intended use is regarded as misuse.

**Reasonably foreseeable misuse**


- Do not place any objects, e.g. clothing, on the device.
- Do not use this device in the vicinity of fuel, solvents, varnishes or other easily inflammable vapours or in rooms where these substances are stored.
- Do not use outdoors.
- Do not use the device for heating vehicles.
- The device must not be used for commercial purposes.
- The device must not be used as the sole means of heating for large rooms.
- Never immerse the device in water.
- Do not use the device in rooms with a volume of less than 4 m<sup>3</sup>. Risk of overheating!
- Do not make any unauthorised modifications, alterations or structural changes to the device.
- This radiator must be set up in a way that the switches and controllers cannot be touched by a person in a bathtub, pool or shower.
- Do not use the device in continuous operation.
- Do not leave the device running unattended at night or while you are asleep.

**Personnel qualification**

People who use this device must have read and understood the manual, especially the Safety chapter.

Maintenance tasks which require the housing to be opened must only be carried out by specialist electrical companies or by the manufacturer.

**Symbols on the device**

| Symbols  | Meaning  |
|--|--|
|  | This symbol located on the device indicates that it is prohibited to place objects (e.g. towels, clothes, etc.) above or directly in front of the device. In order to avoid overheating and fire hazards, the appliance must not be covered! |

**Residual risks**



**Warning of electrical voltage**

Work on the electrical components must only be carried out by an authorised specialist company!



**Warning of electrical voltage**

Before any work on the device, remove the mains plug from the mains socket!  
Do not touch the mains plug with wet or damp hands. Hold onto the mains plug while pulling the power cable out of the mains socket.



**Warning of electrical voltage**

Risk of electric shock!  
Risk of an electric shock if the device comes into contact with water in bathtubs, showers or swimming pools!  
Do not use this device in the immediate vicinity of bathtubs, showers or swimming pools!



**Warning of electrical voltage**

Risk of electric shock!  
The device is not protected against water. There is a risk of electric shock! Never use the device in areas where dripping, spraying or running water can enter the device! Never immerse the device in water!



**Warning of hot surface**

Parts of this appliance can become very hot and cause burns. Particular attention is to be paid when there are children or vulnerable persons present!



**Warning**

Improper installation entails a risk of fire.

**Behaviour in the event of an emergency**

1. Switch the device off.
2. Disconnect the device from the mains by removing the mains plug from the socket. When doing so, be sure to hold the plug, not the cable.
3. Do not reconnect a defective device to the mains.

**Overheating protection**

The device is provided with a safety thermostat, which is activated by overheating of the device. In such an event the device switches off automatically.  
When the safety thermostat is activated, allow the device to cool down. Only then start to look for the cause of overheating. Should the problem persist, please contact the customer service.

## Information about the device

### Device description

The electric heater serves to generate and distribute warm air, e.g. in interior spaces. It is intended for wall mounting.


The device generates heat by means of a heating element. The air surrounding the heating element is heated. The heated air is blown downwards into the room by a fan.

The device is equipped with an integrated thermostat and so generates a constant flow of warm air. The desired target temperature can be adjusted between 18 °C and 45 °C. An overheating protection switches the heating function off in the case of overheating.

In order to dissipate accumulated heat, the fan keeps running for approx. 30 seconds after the heater's switch-off and then switches off automatically.

The device is not protected against water (IPX0).

### Device depiction

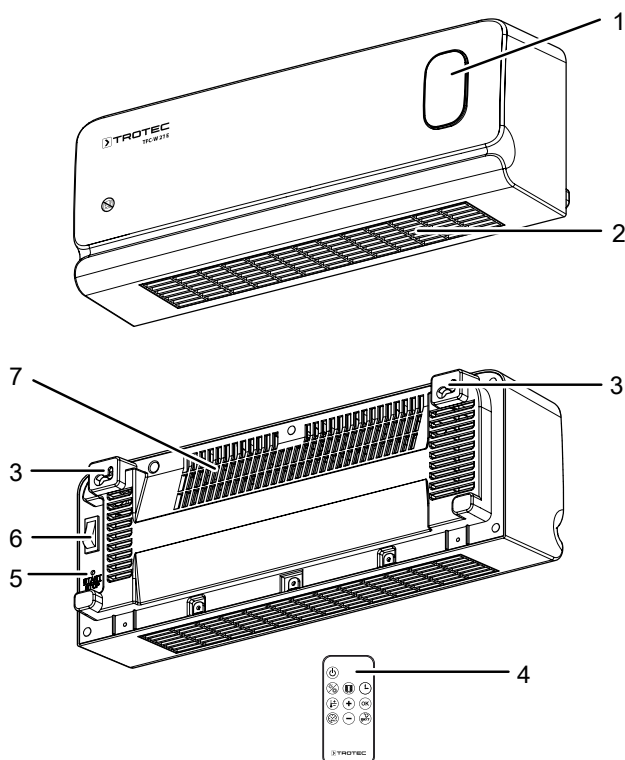

| No. | Designation                   |
|-----|-------------------------------|
| 1   | Display field                 |
| 2   | Air outlet                    |
| 3   | Suspension brackets           |
| 4   | Remote control                |
| 5   | Quick heating button          |
| 6   | On/off switch                 |
| 7   | Air inlet (behind the device) |

## Transport and storage

### Notice

If you store or transport the device improperly, the device may be damaged.

Note the information regarding transport and storage of the device.

### Transport

Observe the following instructions for transport:

- The device has cooled down sufficiently.
- The device is disconnected from the mains and the mains plug has been disconnected.

### Storage

Observe the following instructions for storage:

- Store the device in a dry location and protected from frost and heat.
- Store the device in an upright position where it is protected from dust and direct sunlight.
- If required, use a cover to protect the device from invasive dust.
- Place no further devices or objects on top of the device to prevent it from being damaged.
- Remove the battery from the remote control.

## Assembly and start-up

### Scope of delivery

- 1 x Fan heater
- 1 x Remote control (without batteries)
- 2 x Screw
- 2 x Wall plug
- 1 x Manual

### Unpacking the device



#### Warning

There is a danger of suffocation for children due to packaging material! Keep packaging films and parts away from children. There is a risk of death due to suffocation.

1. Open the cardboard box and take the device out.
2. Completely remove the packaging.
3. Fully unwind the power cable. Make sure that the power cable is not damaged and that you do not damage it during unwinding.




**Wall mounting**




**Warning**

Risk of fire due to incorrect assembly!  
 There is a risk of fire if the required minimum distances are not observed.  
 Observe the technical data in the chapter Technical annex.


1. Mark the position of the drill holes on the wall, complying with the specified distances with horizontal alignment. The distance between the drill holes is 35.9 cm.
  - ⇒ Ensure that the drill holes are drilled so that the device will not be positioned in front of or above a wall socket later on.

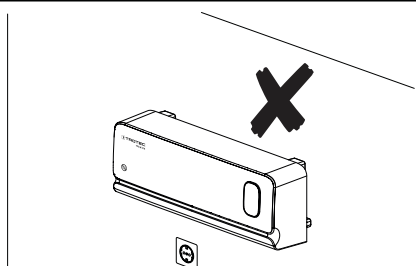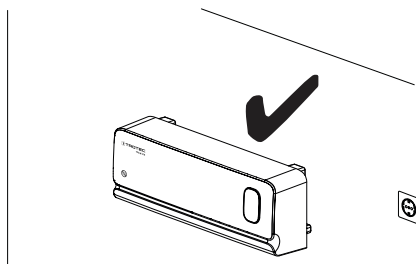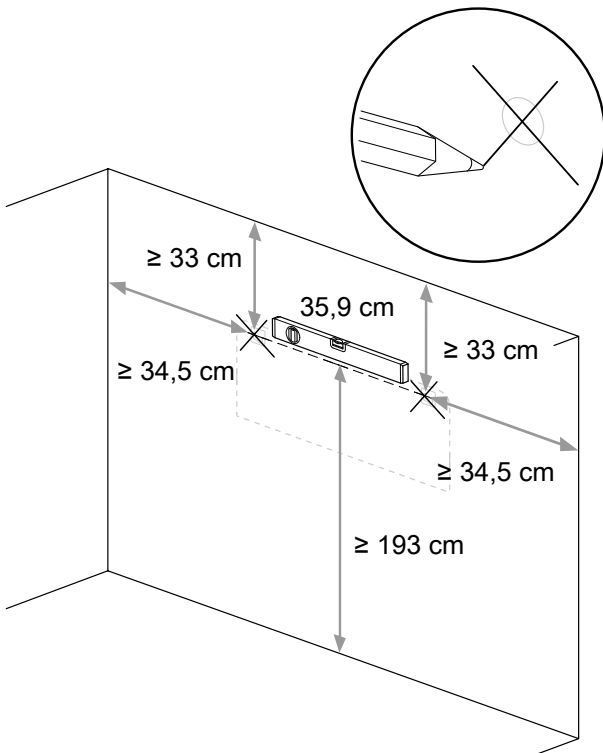


2. Drill two holes into the wall using a 6 mm drill.

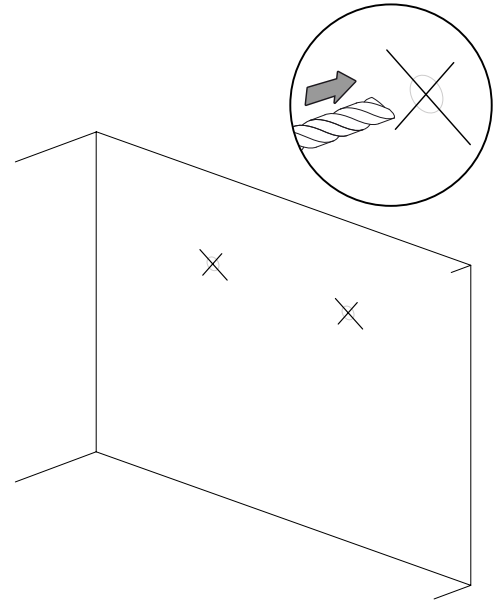

3. Insert the wall plugs into the drill holes.
4. Screw in the screws so that they protrude approx 0.5 cm from the wall.

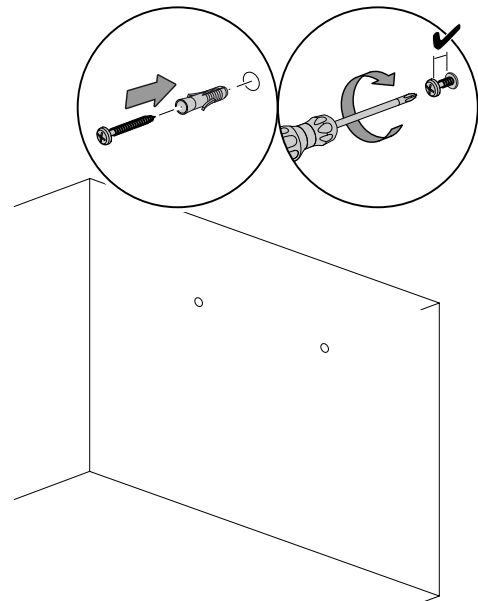

- Hook the device upwards into the screws using the suspension brackets.

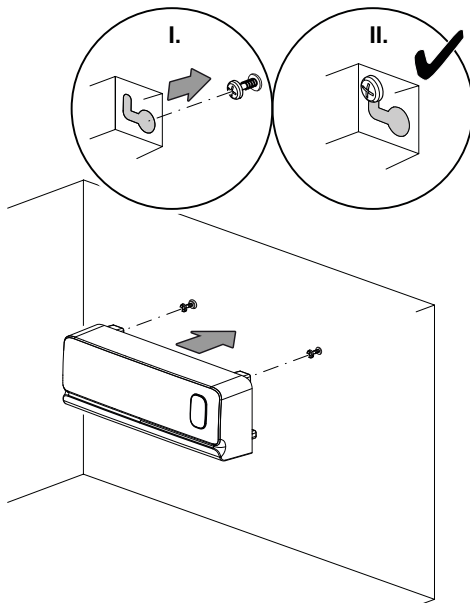

- Make sure that the heating device has a secure hold on the wall.


### Start-up



#### Info

Odours may occur upon initial start-up or after a longer period of non-use.

When starting up and operating the device, observe the minimum distances from walls and objects as described in the chapter Technical annex.

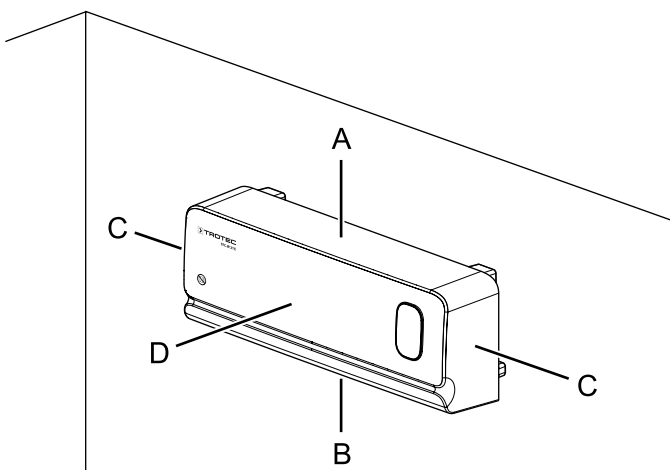


- Before starting the device, check the condition of the power cable. If there are doubts as to their sound condition, contact the customer service.
- Make sure that extension cables are completely unrolled.
- Make sure that no curtains or other objects interfere with the air flow.
- Ensure that the device is protected from moisture and water and cannot come into contact with them.

### Inserting a battery into the remote control

#### Notice

Do not use rechargeable batteries!

- Press the locking at the side of the battery compartment together and pull the battery compartment out of the remote control.

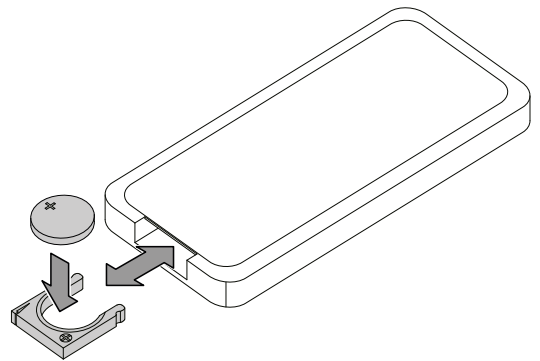

- Insert a CR 2025 or CR 2032 battery into the battery compartment adhering to the correct polarity.
- Slide the battery compartment back into the remote control.

### Connecting the power cable

- Connect the mains plug to a properly secured socket.

**Operation**

**Notice**


Do not use the device in continuous operation.

**Notice**

Do not leave the device running unattended at night or while you are asleep.

- Avoid open doors and windows.


**Display field on the heating device**

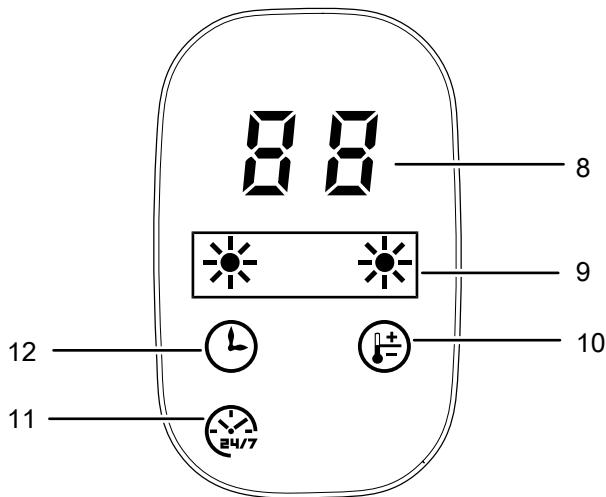

| No. | Designation         | Meaning  |
|-----|---------------------|--|
| 8   | Segment display     | Indication of the current room temperature during operation<br>Indication of the desired room temperature during temperature adjustment<br>Indication the number of hours during timer programming<br>Indication of the weekly schedule during the setting process |
| 9   | Heating level LED   | Illumination when the heating level is activated:<br>☀ = heating level 1 (1150 W)<br>☀☀ = heating level 2 (2000 W)   |
| 10  | Temperature LED     | LED is illuminated: temperature has been set<br>LED flashes: open window function is activated   |
| 11  | Weekly schedule LED | displayed when the weekly schedule is activated  |
| 12  | Timer LED           | Displayed when the timer is activated  |

**Remote control**

All settings of the device must be made using the remote control included in the scope of delivery.

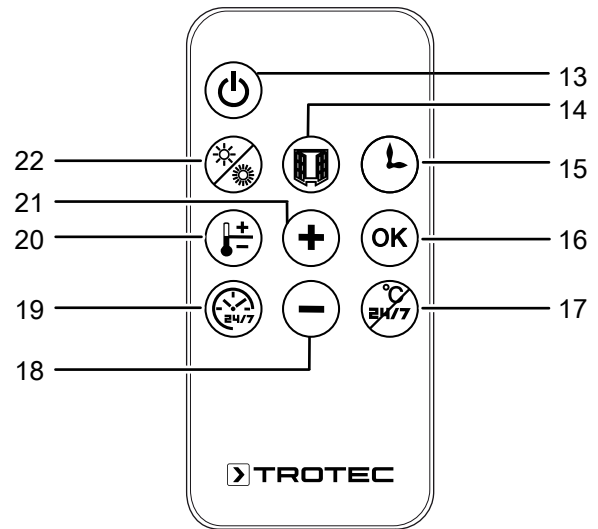

| No. | Designation                 | Meaning  |
|-----|-----------------------------|--|
| 13  | On/Standby button           | Switching the device on or activating standby mode                         |
| 14  | Open window function button | Switching the open window function on or off                               |
| 15  | Timer button                | Switching the timer function on and off                                    |
| 16  | OK button                   | Confirming the desired room temperature and setting of the weekly schedule |
| 17  | Delete setting button       | Resetting all settings to the default setting                              |
| 18  | - button (Decrease value)   | Decreasing the room temperature or number of hours of the timer            |
| 19  | Weekly schedule button      | Setting a weekly schedule  |
| 20  | Temperature button          | Setting the desired room temperature                                       |
| 21  | + button (Increase value)   | Increasing the room temperature or number of hours of the timer            |
| 22  | Heating levels button       | Activating heating level 1 or heating level 2                              |



**Info**

An acoustic signal is emitted each time a button on the remote control is pressed, the device is switched on or goes to standby mode.

## Switching the device on

1. Set the on/off switch (6) to I.
2. Press the *On/Standby* button (13) to switch the device on from standby mode.
  - ⇒ The device is switched on, the room temperature is shown on the segment display (8).



### Info

In standby mode, the device memorises the room temperature set before.

## Setting the weekday and time

After a power failure or prior to initial use, the weekday and the time with minutes and hours have to be set.

1. Press the *Weekly schedule* button (19).
  - ⇒ The segment display (8) shows the number 01. Each of the numbers 01 to 07 stands for one weekday (01 = Monday, 02 = Tuesday, 03 = Wednesday, 04 = Thursday, 05 = Friday, 06 = Saturday, 07 = Sunday).
2. Press the + button (*Increase value*) (21) or the - button (*Decrease value*) (18) to select the current weekday.
3. Press the *OK* button (16) to confirm the setting.
  - ⇒ 00 will be indicated on the segment display (8).
4. Press the + button (*Increase value*) (21) or the - button (*Decrease value*) (18) to set the hour between 00 and 23.
5. Press the *OK* button (16) to confirm the setting.
  - ⇒ 00 will be indicated on the segment display (8).
6. Press the + button (*Increase value*) (21) or the - button (*Decrease value*) (18) to set the minute between 00 and 59.
7. Press the *OK* button (16) to confirm the setting.

## Quick heating

- ✓ The device is in standby mode.
1. Press the *Quick heating* button (5).
    - ⇒ The device switches on.
    - ⇒ Heating level 2 is activated.
  2. Press the *Quick heating* button (5) again to switch off the heating function.
    - ⇒ The device is in standby mode again.

## Setting the desired room temperature

The current room temperature is indicated on the segment display (8). You can set the desired room temperature at any time. The setting range can be set in increments of 1° and is between 18 °C and 45 °C.

1. Press the *Temperature* button (20).
  - ⇒ The *Temperature* LED (10) is illuminated.
2. Press the + button (*Increase value*) (21) or the - button (*Decrease value*) (18) to adjust the desired room temperature.
3. Press the *OK* button (16) to confirm the setting.
  - ⇒ The desired room temperature is stored. The current room temperature is indicated on the segment display (8) again.
  - ⇒ If the ambient temperature is higher than or equals the temperature set, the device switches off.



### Info

While carrying out the temperature setting, you can press the *Delete setting* button (17) to abort the adjustment process. If the temperature has already been set, you must first press the *Temperature* button (20), then the *Delete setting* button (17). The temperature set is reset to 25 °C.

## Setting the heating level

1. Press the *Heating level* button (22) to switch between heating level 1 and heating level 2 or to switch off the heating levels.
  - ⇒ Depending on the corresponding heating level, no LEDs, or one LED or two LEDs are illuminated (9).

## Open window function



### Info

The open window function can only be switched on if the heating levels are set.

- ✓ Heating level 1 or heating level 2 is switched on.
1. Press the *Open window function* button (14) to switch on the function.
    - ⇒ The *Temperature* LED (10) flashes.
    - ⇒ The temperature measurement will start after one minute. The heating device now monitors the room temperature. If a room temperature reduction by more than 8 °C is measured within 10 minutes, an acoustic signal is emitted. The device stops heating, the fan continues running for 30 seconds and the device changes to standby mode. The open window function is deactivated.
  2. Press the *Open window function* button (14) to switch off the open window function during operation.

## Setting the timer

The timer function switches the device off after the set time has elapsed.

The time to be set can be between 1 and 8 hours and is adjustable in increments of 1 hour.

1. Press the *Timer* button (15).
  - ⇒ *OH* will be indicated on the segment display (8).
2. Press the *Timer* button (15) several times to adjust the hours of the timer.
  - ⇒ The time set is indicated on the segment display (8).
  - ⇒ The desired time until automatic switch-off is saved.
  - ⇒ The *Timer* LED (12) is lit.

Switching off the device manually deactivates an active timer. Setting the number of hours to 0 switches the timer function off.

## Weekly schedule



### Info

If you do not confirm a setting within 10 seconds, the process is aborted.



### Info

While setting the weekly schedule, you can press the *Delete setting* button (17) to abort the adjustment process.

The time periods of heating programmes P1 and P2 are predefined, the periods of heating programme P3 can be adapted.

| Heating programme | Monday-Sunday (time)        |
|-------------------|-----------------------------|
| P1                | 08:00 – 17:00               |
| P2                | 18:00 – 07:00               |
| P3                | adjustable for each weekday |

Proceed as follows to select heating programme P1 or P2:

- ✓ Heating level 1 or heating level 2 is switched on.
  - ✓ The desired room temperature is set.
1. Press the *Weekly schedule* button (19) once or twice to select heating programme *P1* or *P2*.
    - ⇒ *P1* or *P2* is displayed on the segment display (8).
  2. Press the *OK* button (16) to confirm the selection.
    - ⇒ The weekly schedule LED (11) and the Temperature LED (10) are illuminated.
    - ⇒ The corresponding Heating level LED (9) is illuminated.

Please proceed as follows to set heating programme P3:

- ✓ Heating level 1 or heating level 2 is switched on.
  - ✓ The desired room temperature is set.
1. Press the *Weekly schedule* button (19) three times to select heating programme *P3*.
    - ⇒ *P3* will be indicated on the segment display (8).
  2. Press the *OK* button (16) to confirm the selection.
    - ⇒ The segment display (8) shows the number 1. Each of the numbers 1 to 7 stands for one weekday (1 = Monday, 2 = Tuesday, 3 = Wednesday, 4 = Thursday, 5 = Friday, 6 = Saturday, 7 = Sunday).
  3. Press the + button (*Increase value*) (21) or the - button (*Decrease value*) (18) to select the desired weekday.
  4. Press the *OK* button (16) to confirm the setting.
    - ⇒ 00 will be indicated on the segment display (8).
  5. Press the + button (*Increase value*) (21) or the - button (*Decrease value*) (18) to set the desired switch-on time (0:00 to 23:00 o'clock).
  6. Press the *OK* button (16) to confirm the selection.
    - ⇒ 00 will be indicated on the segment display (8).
  7. Press the + button (*Increase value*) (21) or - button (*Decrease value*) (18) to set the desired switch-off time (0:00 to 23:00 o'clock).
  8. Press the *OK* button (16) to confirm the setting.
  9. Repeat steps 3 to 8 until you have set all weekdays and times.
    - ⇒ The Weekly schedule LED (11) is illuminated when heating programme P3 has been set.
    - ⇒ The Temperature LED (10) and the corresponding Heating level LED (9) are illuminated.



### Info

The value for the switch-off time must be greater than the value for the switch-on time.



### Info

If you press the *Weekly schedule* button (19) four times, the weekly schedule is deactivated.

## Shutdown



### Warning of electrical voltage

Do not touch the mains plug with wet or damp hands.

1. Switch the device to standby mode by pressing the *On/Standby* button (13) or the *Quick heating* button (5).
2. Wait for 30 seconds until the fan has dissipated the accumulated heat and then set the *On/off* switch (6) to **O** position to switch off the device.
3. Disconnect the device from the mains by removing the mains plug from the socket. When doing so, be sure to hold the plug, not the cable.
4. Allow the device to cool down sufficiently.

## Errors and faults



### Warning of electrical voltage

Tasks which require the device to be opened must only be carried out by authorised specialist companies or by the manufacturer.

### Notice

Wait for at least 3 minutes after maintenance and repair work. Only then switch the device back on.

The device has been checked for proper functioning several times during production. If malfunctions occur nonetheless, check the device according to the following list.

### The device does not start:

- Check the power connection.
- Check the power cable and mains plug for damage. If you notice damages, do not try to take the device back into operation.  
If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Check the on-site fusing.
- The motor might be defective. Have a defective motor replaced by a specialist electrical company.

### The air current is reduced:

- Check the air inlet and outlet. Make sure that air inlet and outlet are not obstructed. Remove any dirt. Observe the minimum distance from walls or other objects according to the technical data.

### The device is loud or vibrates:

- Ensure that the device is mounted properly and firmly on the wall.

### The device does not respond to the infrared remote control:

- Check whether the distance between remote control and device is too large and reduce it if necessary.
- Make sure there are no obstacles, such as furniture or walls, between the device and the remote control. Ensure visual contact between device and remote control.
- Check the charging status of the battery and replace the battery, if necessary.

### The device still does not operate correctly after these checks:

Contact the manufacturer's customer service. If necessary, take the device to an authorised specialist electrical company or to the manufacturer for repair.

## Maintenance

### Activities required before starting maintenance



### Warning of electrical voltage

Do not touch the mains plug with wet or damp hands.

- Switch the device to standby mode by pressing the *On/Standby* button (13) or the *Quick heating* button (5).
- Wait for 30 seconds until the fan has dissipated the accumulated heat and then set the On/off switch (6) to the **0** position to switch off the device.
- Disconnect the device from the mains by removing the mains plug from the socket. When doing so, be sure to hold the plug, not the cable.
- Allow the device to cool down completely.



### Warning of electrical voltage


Tasks which require the device to be opened must only be carried out by authorised specialist companies or by the manufacturer.

### Cleaning the housing

Clean the housing with a soft, slightly damp and lint-free cloth. Ensure that no moisture enters the housing. Protect electrical components from moisture. Do not use any aggressive cleaning agents such as cleaning sprays, solvents, alcohol-based or abrasive cleaners to dampen the cloth.

## Technical annex

### Technical data

| Parameter                                      | Value  |
|--|--|
| Min. heating capacity                          | 1150 W   |
| Max. heating capacity                          | 2000 W   |
| Operating range                                | -10 °C to 50 °C  |
| Setting range                                  | 18 °C to 45 °C   |
| Mains connection                               | 220-240 V~ 50 - 60 Hz  |
| Nominal current consumption                    | 8.7 A  |
| Max. power consumption                         | 2000 W   |
| Plug type                                      | CEE 7/17   |
| Cable length                                   | 1.8 m  |
| Protection class                               | II /  |
| Type of protection                             | IPX0   |
| Weight   | 1.3 kg   |
| Dimensions<br>(depth x width x height)         | 122 x 450 x 160 mm   |
| Minimum distance to walls and<br>other objects | A: top: 30 cm<br>B: bottom: 180 cm<br>C: side: 30 cm<br>D: front: 100 cm               |
| Remote control batteries                       | CR 2025 or CR2032 (3 V)  |

Information requirements for electrical local space heaters

| Parameter   | Value / item   |
|---|--|
| Model   | TFC-W 27 E   |
| <b>Heat output</b>  |  |
| Nominal heat output $P_{nom}$                                       | 2 kW   |
| Minimum heat output (indicative) $P_{min}$                          | 1.15 kW  |
| Maximum continuous heat output $P_{max,c}$                          | 2 kW   |
| <b>Power consumption</b>  |  |
| In the Off state $P_0$  | 0 W  |
| In standby mode $P_{sm}$  | 0.75 W   |
| In idle condition $P_{idle}$  | 0.81 W   |
| In networked standby operation $P_{nsm}$                            | n/a  |
| Standby operation with information or status indication             | YES  |
| Room heating annual efficiency in active operation $\eta_{s,on}$    | 92 %   |
| <b>Type of heat output/room temperature control</b>                 |  |
| Single-stage heat output, no room temperature control               | NO   |
| Two or more manually adjustable stages, no room temperature control | NO   |
| With mechanic thermostat room temperature control                   | NO   |
| With electronic room temperature control                            | NO   |
| With electronic room temperature control plus day timer             | NO   |
| With electronic room temperature control plus week timer            | YES  |
| <b>Other control options</b>  |  |
| Room temperature control, with presence detection                   | NO   |
| Room temperature control, with open window detection                | YES  |
| With distance control option  | NO   |
| Adaptive control of heating start                                   | NO   |
| Operating time limitation   | YES  |
| Black bulb sensor   | NO   |
| Self-learning function  | NO   |
| Control accuracy  | NO   |
| Contact details   | Trotec GmbH<br>Grebbener Straße 7<br>52525 Heinsberg |

NA = not applicable

## Disposal

Always dispose of packing materials in an environmentally friendly manner and in accordance with the applicable local disposal regulations.



The icon with the crossed-out wheeled bin indicates that this device and any associated components (e.g. remote controls) must not be disposed of with household waste at the end of their life, in accordance with the Waste Electrical and Electronic Equipment Directive (2012/19/EU) and national laws.

You will find collection points for free return of waste electrical and electronic equipment in your vicinity. The addresses can be obtained from your municipality or local administration. You can also find out about other return options that apply for many EU countries on the website <https://hub.trotec.com/?id=45090>. Otherwise, please contact an official recycling centre for electronic and electrical equipment authorised for your country.

The separate collection of waste electrical and electronic equipment aims to enable the re-use, recycling and other forms of recovery of waste equipment as well as to prevent negative effects for the environment and human health caused by the disposal of hazardous substances potentially contained in the equipment.



This icon with the crossed-out wheeled bin indicates that batteries or accumulators must not be disposed of with household waste at the end of their life. If the device contains batteries or accumulators that contain mercury, cadmium or lead, the respective chemical symbol (Hg, Cd or Pb) is shown below the icon of the crossed-out wheeled bin. To prevent environmental pollution, do not carelessly leave batteries or electrical and electronic equipment containing batteries in public areas. In the European Union, batteries and accumulators must be returned to a designated collection point in accordance with REGULATION (EU) 2023/1542 OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 12 July 2023 concerning batteries and waste batteries. Remove batteries/accumulators and dispose of them separately according to the relevant legal requirements.

### Only for United Kingdom

According to Waste Electrical and Electronic Equipment Regulations 2013 (SI 2013/3113) (as amended) and the Waste Batteries and Accumulators Regulations 2009 (SI 2009/890) (as amended), devices that are no longer usable must be collected separately and disposed of in an environmentally friendly manner.

Trotec GmbH

Grebber Str. 7  
52525 Heinsberg  
Germany

☎ +49 2452 962-0

☎ +49 2452 962-200

✉ [online@trotec.com](mailto:online@trotec.com)

[www.trotec.com](http://www.trotec.com)